



1. Install Chassis

Secure the trim with the set screw side of the chassis facing the door hinges with the provided screws.

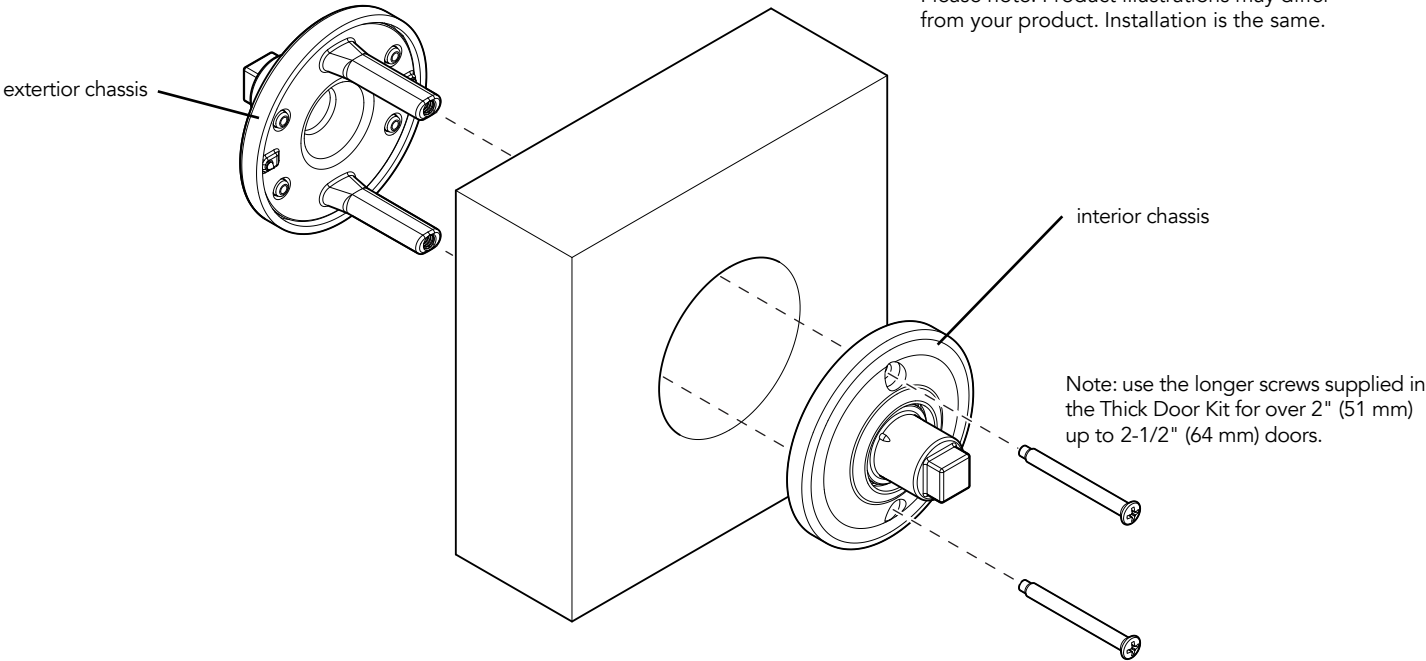

2. Install knob/lever


⚠ Note: Do not remove the pre-installed set screw from the lock chassis.

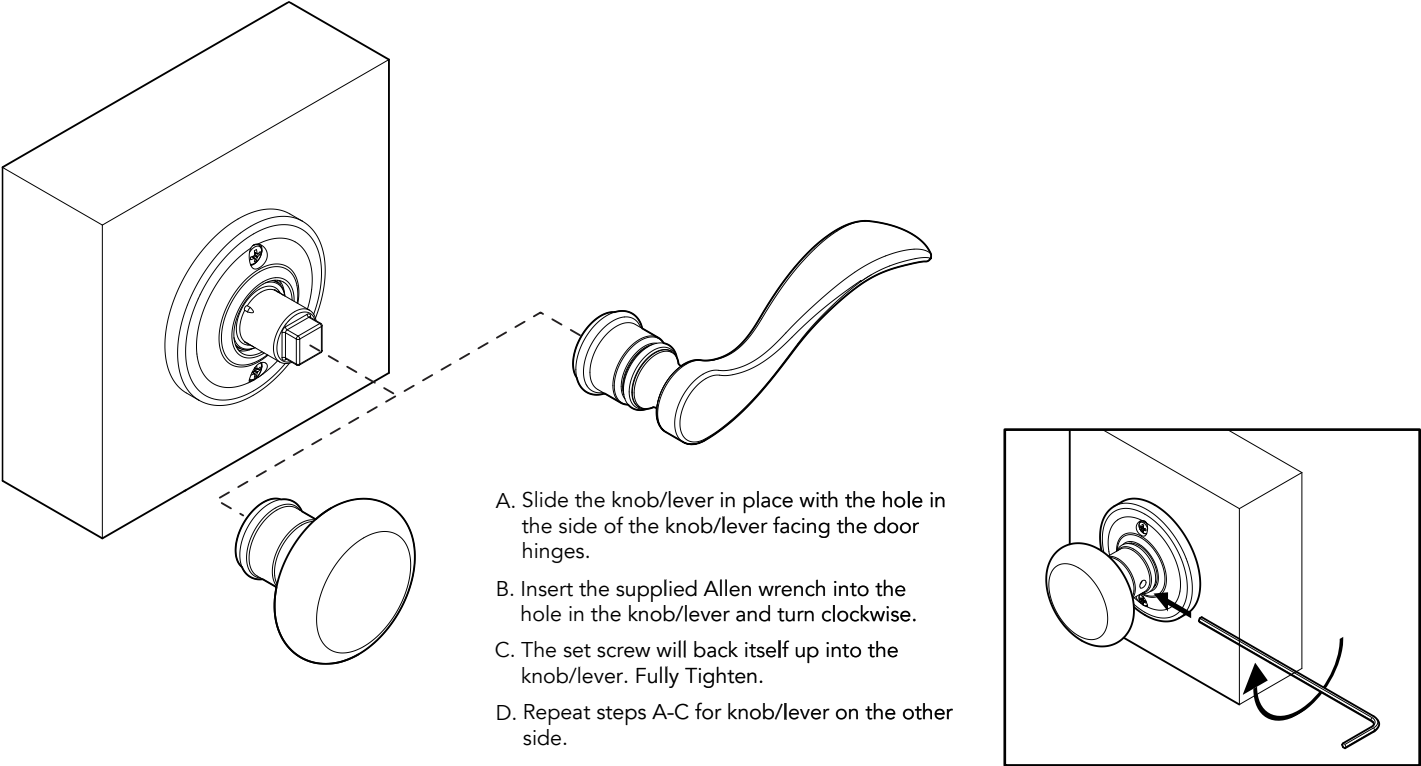

Door Preparation

If your door requires drilling, use the supplied template below with the door preparation instructions available at www.baldwinhardware.com

TEMPLATE

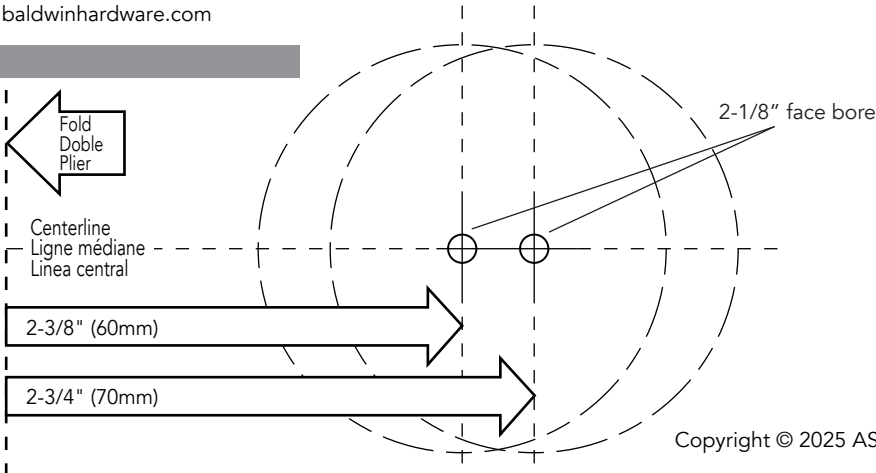


1. Installer le châssis

Instale el chasis

Fixez la garniture avec le côté de la vis d'assemblage du châssis face aux charnières de la porte avec les vis fournies.

Fije el embellecedor con el lado del tornillo de fijación del chasis orientado hacia las bisagras de la puerta con los tornillos suministrados.

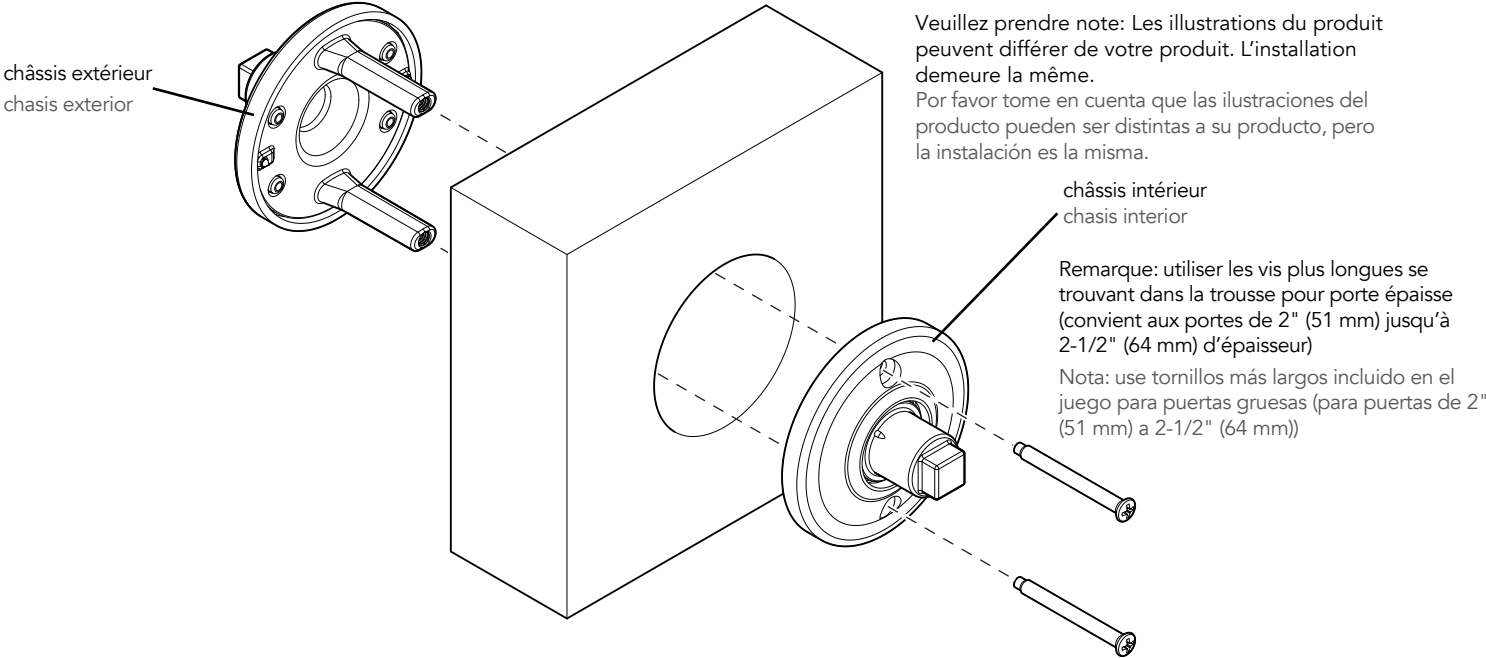


2. Installer la poignée ou le retour

Instale la perilla o manija

⚠ Remarque: Ne pas retirer la vis de blocage préinstallée du châssis de la serrure.

Nota: No retire el tornillo de fijación preinstalado del chasis de la cerradura.

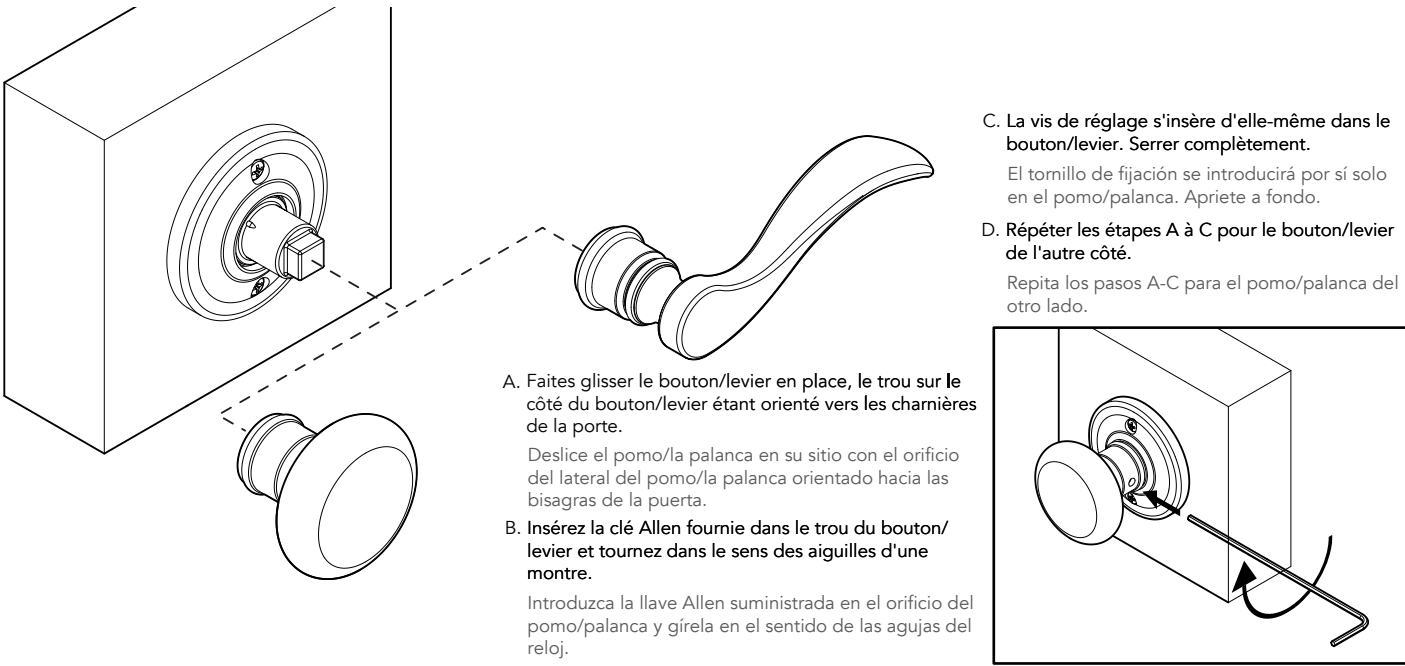

Préparation de la porte/ Preparación de la puerta

Si votre porte a besoin de forage, utiliser le gabarit fourni ci-dessous avec les instructions de préparation de la porte se trouvant sur le site www.baldwinhardware.com

Si tiene que taladrar la puerta, use la plantilla incluida abajo con las instrucciones de preparación de la puerta disponibles en www.baldwinhardware.com

GABARIT • PLANTILLA

