


BALDWIN®  
MULTI-POINT  
INSTALLATION INSTRUCTIONS

Entrance 105mm

Cylinder Function

Exploded View

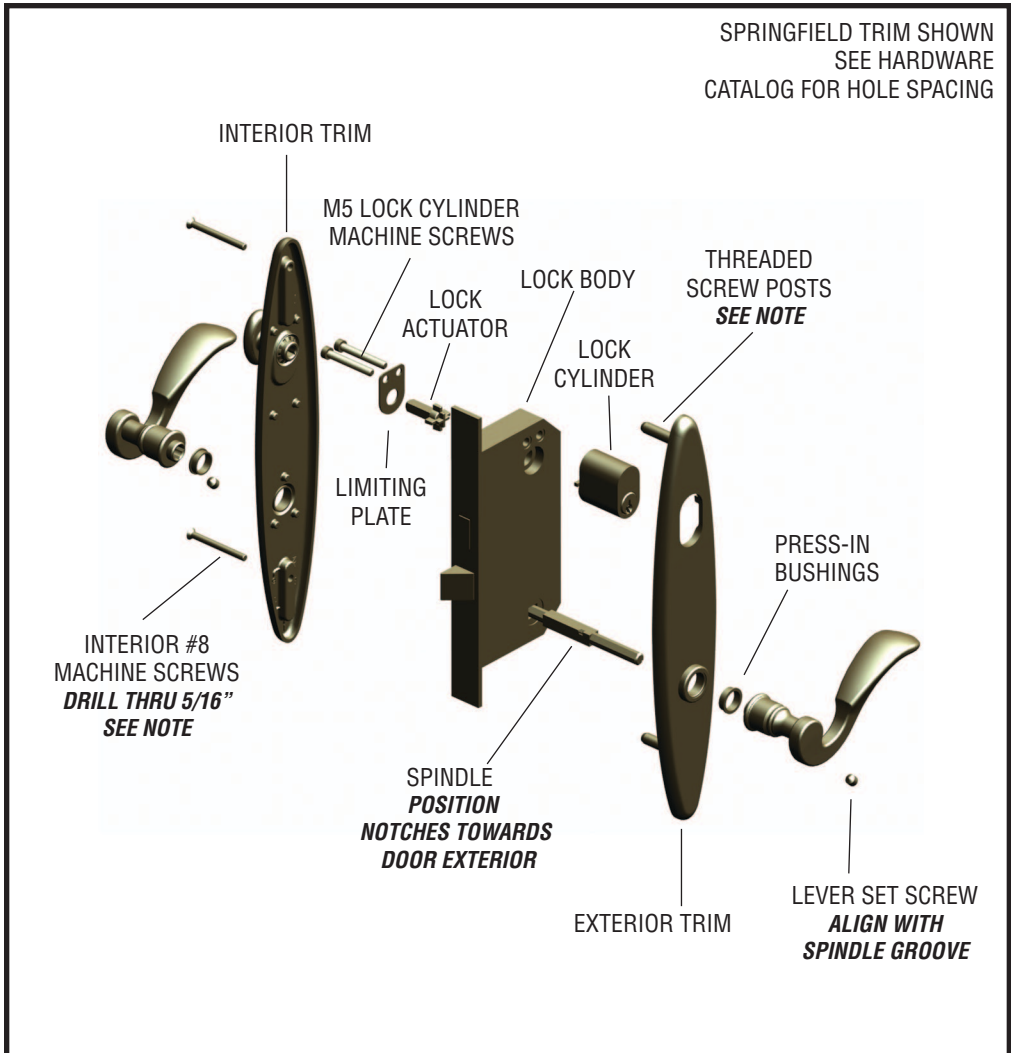

**#8 Machine Screws Note:** Proper trim alignment requires installing the spindle and levers before completely securing the #8 screws.

**Threaded Screw Posts Note:** Length may need to be cut down to accommodate different door manufacturers' hole pattern.

# BALDWIN®

## MULTI-POINT


### INSTALLATION INSTRUCTIONS

Patio 105mm

Cylinder Function

Exploded View

SPRINGFIELD TRIM SHOWN  
SEE HARDWARE  
CATALOG FOR HOLE SPACING

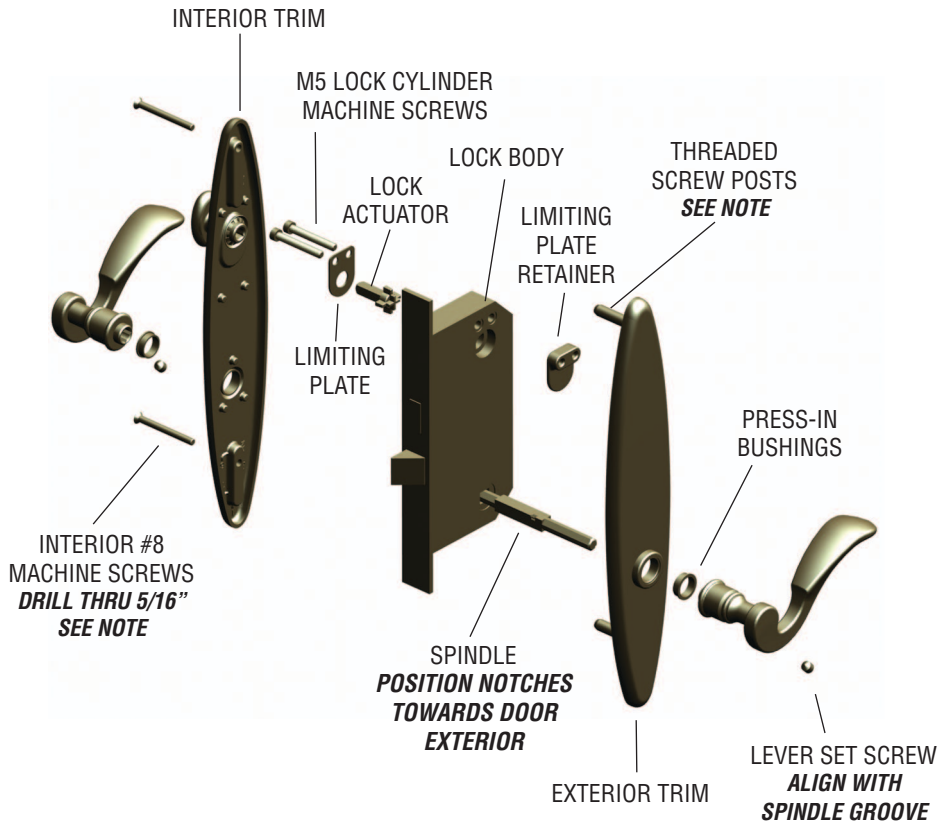

**#8 Machine Screws Note:** Proper trim alignment requires installing the spindle and levers before completely securing the #8 screws.

**Threaded Screw Posts Note:** Length may need to be cut down to accommodate different door manufacturers' hole pattern.